ARCTIC HAYES

Instruction and Safety Manual

Thank you for purchasing the Vortex Pro Brazing Torch. This manual contains important safety information and instructions for use.

Please read this manual carefully and store in a safe place for future reference.

ALUMINIUM

General Safety Information

- CAUTION: Torch ignites INSTANTLY.
- DO NOT: Point the torch towards other people or flammable objects.
- DO NOT: Use the torch to check for gas leaks. • DO NOT: Use a torch that is known to be damaged or to leak.
- The use of protective goggles, gloves and flame-proof clothing is recommended.
- Keep out of reach of children.
- Always point the torch away from yourself. • When not in use, disconnect the torch from the gas cylinder.
- Torch is designed to be used with Mixed Gases and Propane Gas with CGA 600 thread.
- Ensure work areas are well ventilated and use respiratory protection when working with
- potentially toxic materials. Avoid contact of flux with eyes and skin.
- When connected to a cylinder, ensure the torch is placed on a level surface.
- · Always keep a fire extinguisher close at hand.
- Keep combustible materials away from the
- work area. • Use a heat shield to protect the surrounding
- area
- Prolonged use can cause the tip to become extremely hot. Take care to prevent burns.

Instructions for Use

Always use with a high quality gas. For optimum performance, use Vortex Map-X or Propane gas. To attach the torch to the cylinder, hold the torch and gas cylinder upright and turn the gas cylinder clockwise into the torch valve body until hand tight.

Switch the safety lock to "Unlock". To light the torch, turn the flame regulator anti-clockwise about half a turn and press the ignition trigger.

For a continuous flame press the flame lock down whilst holding the ignition trigger. This can be stopped by pressing the trigger again, disengaging the flame lock.

Turn the flame regulator to obtain the required flame length and intensity.

To extinguish the flame, release the ignition trigger.

To disconnect the torch, turn the gas cylinder anti-clockwise. Ensure this is carried out in a well ventilated area, away from any flame or source of ianition.

When disconnected, press the ignition trigger several times to purge the torch of any remaining fuel. Before storing, make sure the torch is cool and the flame lock is switched to "safety lock".

WARRANTY

ARCTIC HAYES LTD WARRANTS THE VORTEX BRAZING TORCH FOR A PERIOD OF 12 MONTHS FROM THE DATE OF PURCHASE, TO BE FREE FROM DEFECTS IN MATERIALS AND WORKMANSHIP.

PROVIDED IT OCCURS UNDER NORMAL USE AND SERVICE, DURING THIS PERIOD WE WILL REPAIR OR REPLACE ANY PRODUCT FOUND TO BE DEFECTIVE IN MATERIALS OR WORKMANSHIP.

THIS WARRANTY DOES NOT COVER NORMAL WEAR AND TEAR AND ARCTIC HAYES LTD WILL BE UNDER NO OBLIGATION TO REPAIR OR REPLACE PRODUCTS FOUND TO BE DEFECTIVE DUE TO DAMAGE, MISUSE, NEGLECT, UNREASONABLE USE OR FOUND TO HAVE BEEN DISMANTLED OR TAMPERED WITH.

SHOULD A PROBLEM ARISE WITH THE PRODUCT, PLEASE CONTACT THE ARCTIC HAYES HELPLINE ON +44 (0)113 271 5245



Cool Tip 2. Flame Lock 3. Flame Regulator

4. Instant Piezo Ignition

1. Stainless Steel

- 5. Safety Lock
- 6. Tough Aluminium Body
- 7. Standard CGA600 Thread

Troubleshooting Problems & Solutions

Problem	Possible Causes	Solutions
Torch will not light	Empty fuel cylinder	Replace fuel cylinder
	Pressing the ignition trigger too rapidly	Press the trigger slowly and steadily
	Excessive moisture	Remove the burner tip and allow torch to dry
	Blocked burner tube tip	Remove tip, tap out any debris & re-assemble
Burner head glows or overheats	Fuel cylinder nearing empty	Replace fuel cylinder
Unstable flame	Extreme ambient air conditions (wind)	Avoid areas with extreme ambient conditions

Arctic Haves Ltd 9 Millshaw Park Ave | Leeds LS11 0LR | United Kingdom sales@arctic-hayes.com www.arctic-hayes.com +44(0)113 271 5245

Arctic Haves Ltd Ipco B.V, Spinel 400 3316 LG Dordrecht The Netherlands info@arctic-hayes.com +44(0)113 271 5245

MAR22V4.

